

使用上の注意

FRAM カードの端子（裏の金色の部分）には手で触れないで下さい。汚れて接触が悪くなる場合があります。

取り付け、取り外しは必ず本体の電源を切ってから行ってください。

FRAM カードを取り扱うときは静電気にご注意ください。

MEM\$="S1"又はMEM\$="S2"でご使用ください。MEM\$="B"では使用できません。

本体をクロックアップしている場合、正常に動作しない場合があります。

使用方法


ポケコン本体の裏の RAM カードスロットに FRAM カードの端子が本体のゴム端子の側になるように取り付けてください。

FRAM カードは"S2:"というドライブ名になります。INIT 命令でラムファイル"F:"を確保してラムファイルとして使用することもできます。詳しい使用方法是ポケコン本体の説明書をご参照ください。

ライトプロテクト

通常はスイッチを W 側（書き込み可）にしてご使用ください。FRAM カード内のデータの書き換えを禁止するときはスイッチを P 側（書き込み禁止）にしてご使用ください。

スイッチの切り替えは必ず本体の電源を切ってから行ってください。

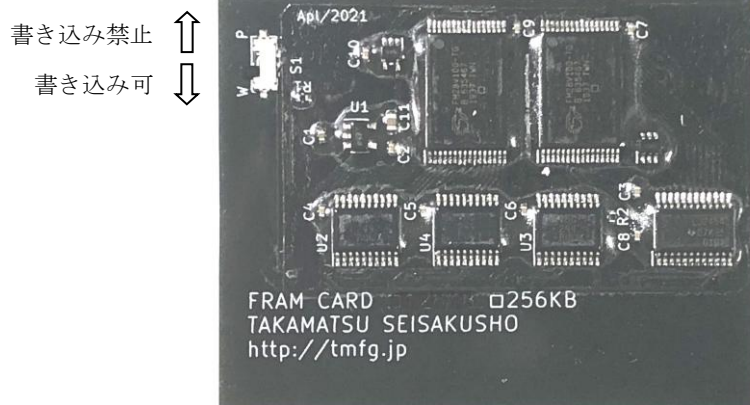

仕様

対応機種	PC-E500,E550,1480U,1490U,1490UII,E650,U6000
容量	128KB/256KB
ライトプロテクト	スイッチによる書込保護可能
外形寸法	幅 42mm×奥行 54mm×厚さ 3mm(突起部含む)
重量	約 8g

保障

1年以内に正常な使用状態で故障が発生した場合は無償で修理致します。但し、不具合が原因で生じた損害等につきましては責任を負いかねます。

Precautions for use

Do not touch the terminals of the FRAM card (the gold-colored part on the back) with your hands. It may become dirty and contact may be impaired.

Be sure to turn off the power of the Pocket Computer before installing or removing the FRAM card.

Be careful of static electricity when handling the FRAM card.

Use the FRAM card with MEM\$="S1" or MEM\$="S2", it cannot be used with MEM\$="B".

If the Pocket Computer is clocked up, it may not operate properly.

How to use

Install the FRAM card into the RAM card slot on the back of the Pocket Computer with the terminal of the FRAM card is facing the rubber terminal of the Pocket Computer.


The FRAM card has a drive name "S2:" and can be used as a RAM file by allocating the ram file "F:" with the INIT instruction. Refer to the instruction manual of the Pocket Computer for details.

Write protect

Normally, set the switch to "W" (write-enable), but if you want to prohibit the rewriting of data in the FRAM card, set the switch to "P" (write-protect).

Be sure to turn off the power of the Pocket Computer before switching the switch.

write-enable ↑
write-protect ↓

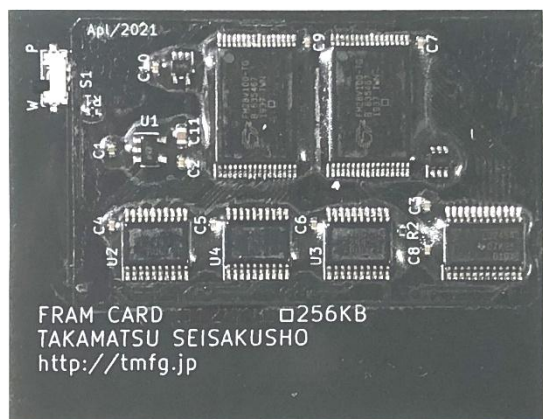

Specifications

Compatible models: PC-E500, E550, 1480U, 1490U, 1490UII, E650, U6000, E500S

Capacity: 128KB/256KB

Write-protected: by write-protect switch

Dimensions: 42 mm (W) x 54 mm (D) x 3 mm (TH) (including protruding parts)

Weight Approx.: 8g

Guarantee

If a malfunction occurs within one year under normal use, the product will be repaired free of charge.

However, we are not responsible for any damage caused by the defect.